


Fitting instructions


Make: Hyundai

i20; 2008->



Type: 5082

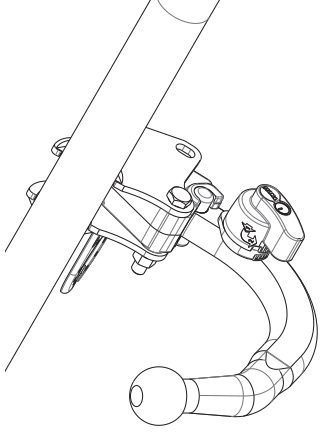




ser.nr:

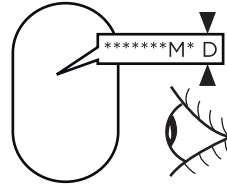



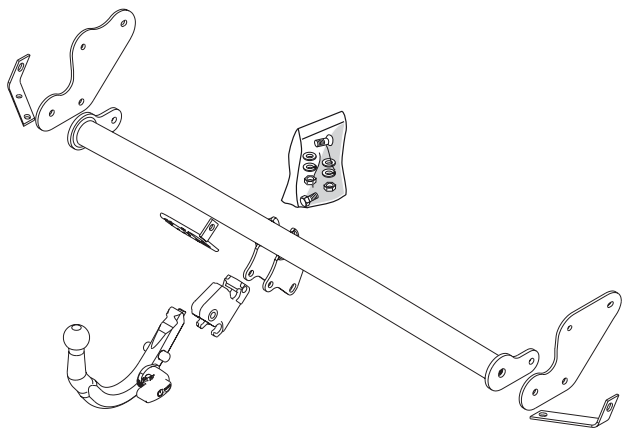
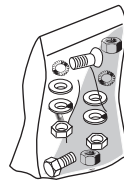
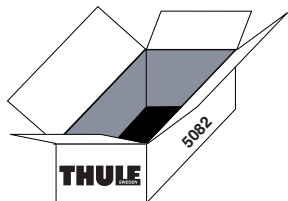
ser.nr:

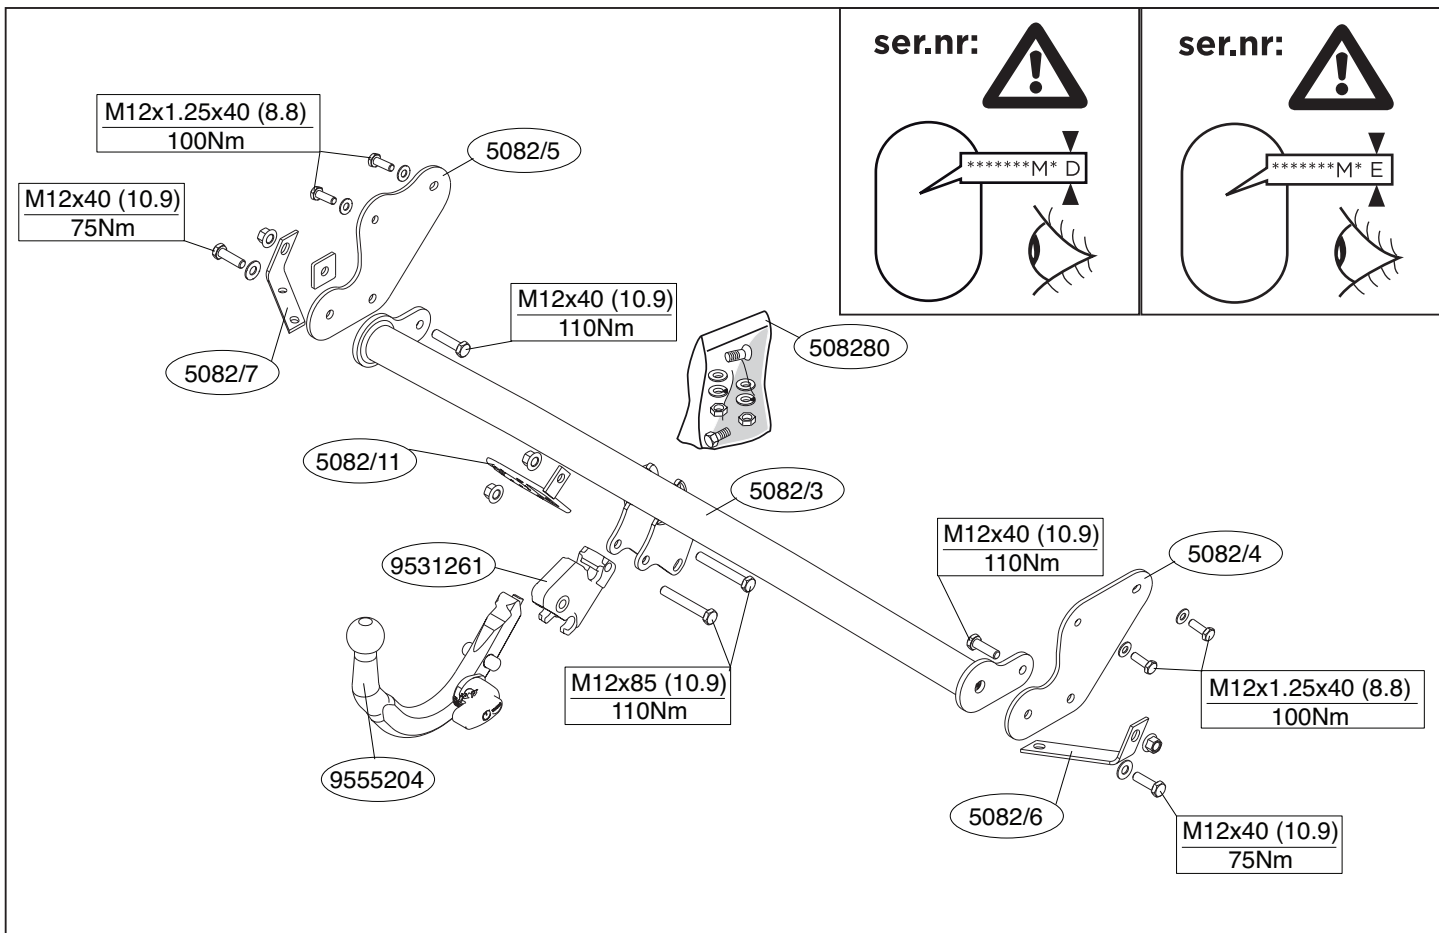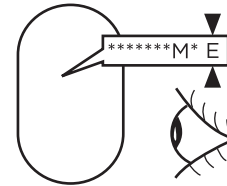

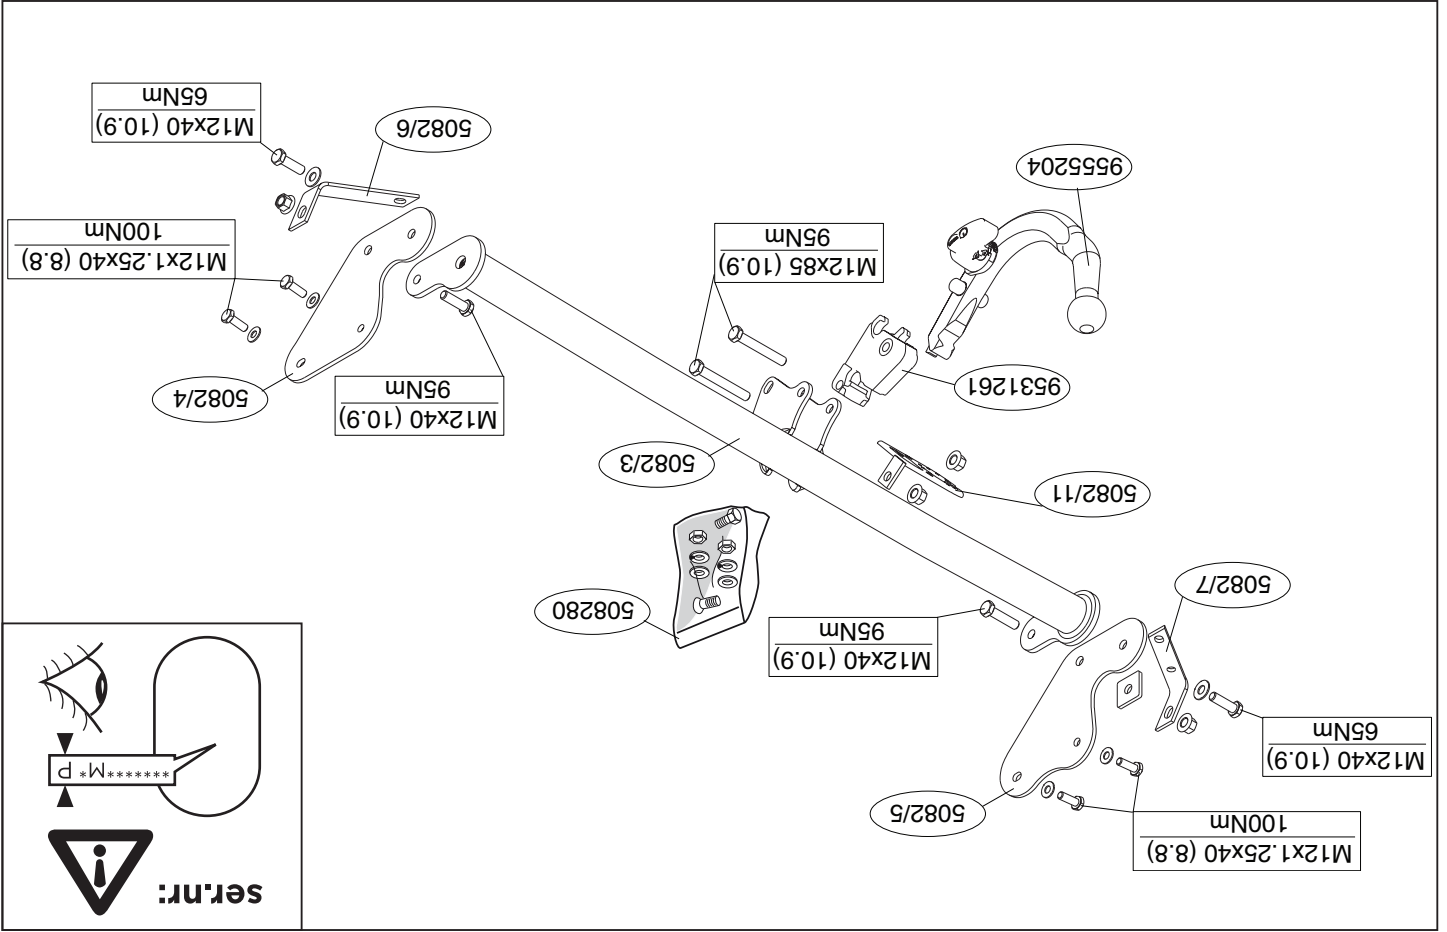

ser.nr:  





(2x) M12x85 (10.9)



(4x) M12



(4x) M12x50 (10.9)



(6x) M12









(4x) M12x1,25x40 (8.8)





(1x) 40x40x5


© 508270/03-04-2014/3

© 508270/03-04-2014/12

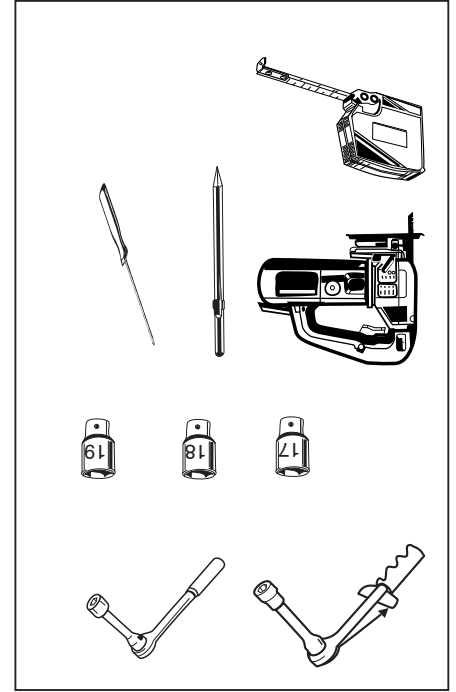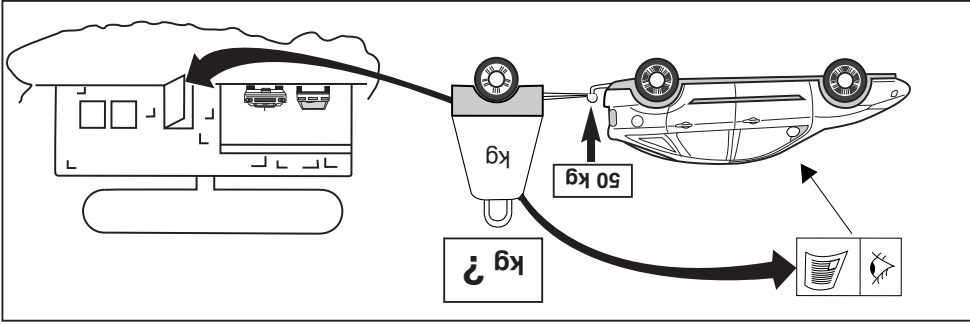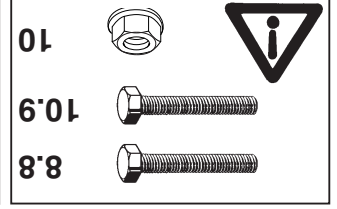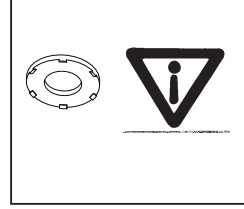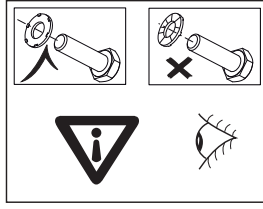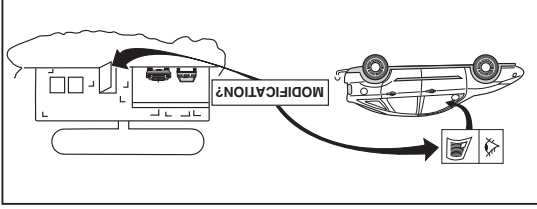

D-Value : 6,5 KN

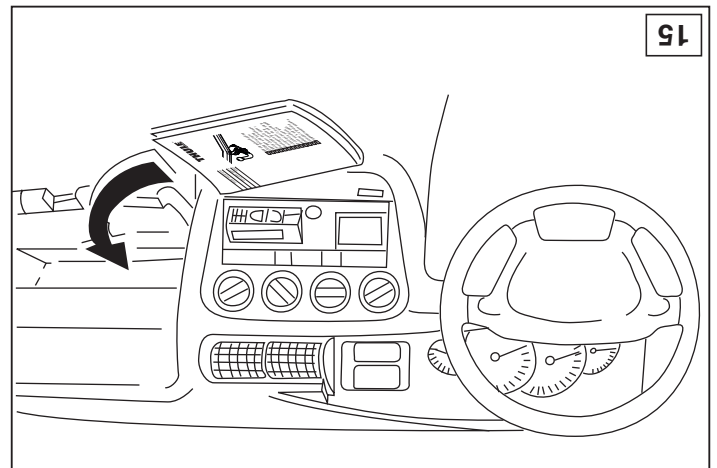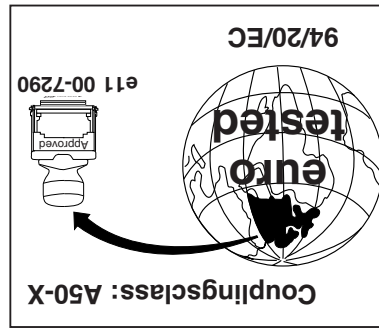

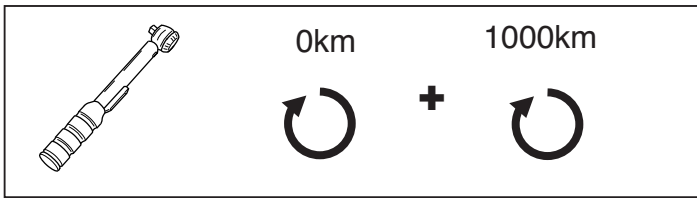

NOTE:

* Should this installation process entail the cutting of the bumper – conformation **MUST** be obtained by the installation engineer of the customer’s acceptance prior to completion. Thule Towing Systems do not accept responsibility for any matters arising as a result of this miscommunication.

All measurements are in mm!





HINWEISE:

* Die für das Fahrzeug zugelassene Anhängelast ist den Fahrzeug Unterlagen zu entnehmen. Bei Änderungen des Fahrzeuggewichtes muß die höchstzulässige Anhängelast gegebenenfalls aus dem D-Wert nachgerechnet werden.







Auskunft hierüber kann Ihr Fachhändler oder der TÜV geben.




* Elektrische Anlage gemäß StVZO anbringen.

© 508270/03-04-2014/5

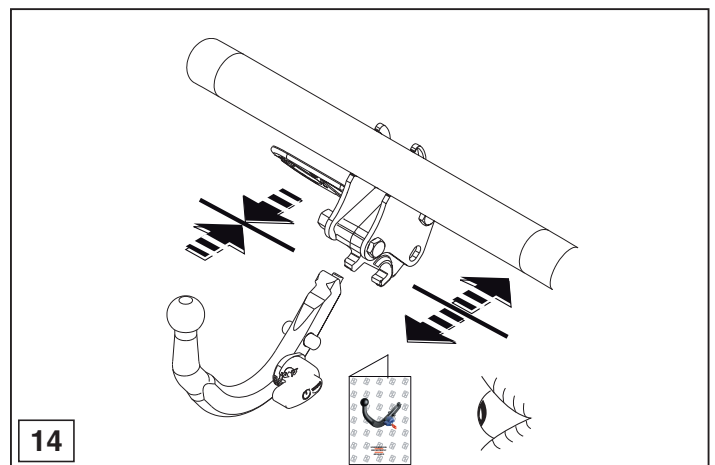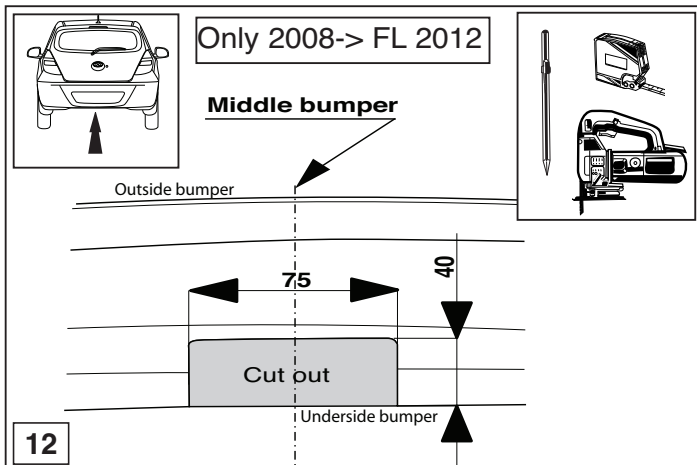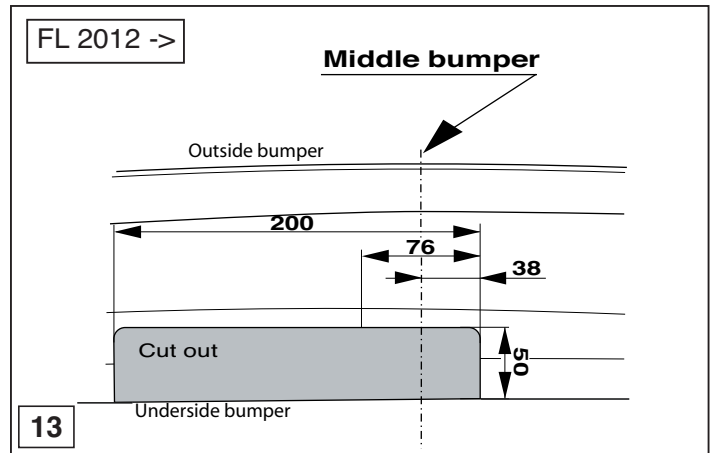
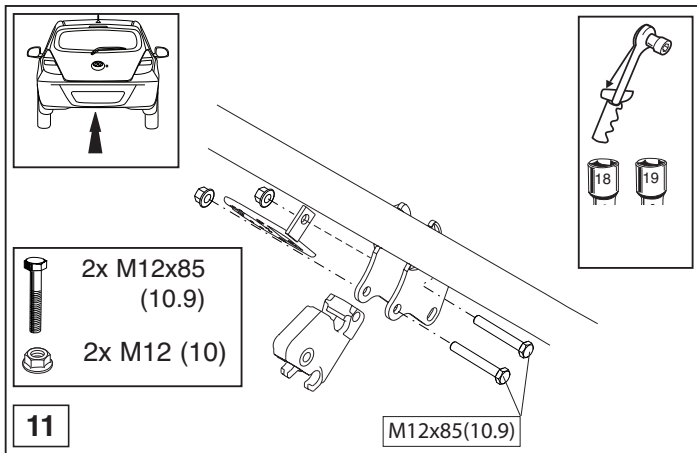


© 508270/03-04-2014/10

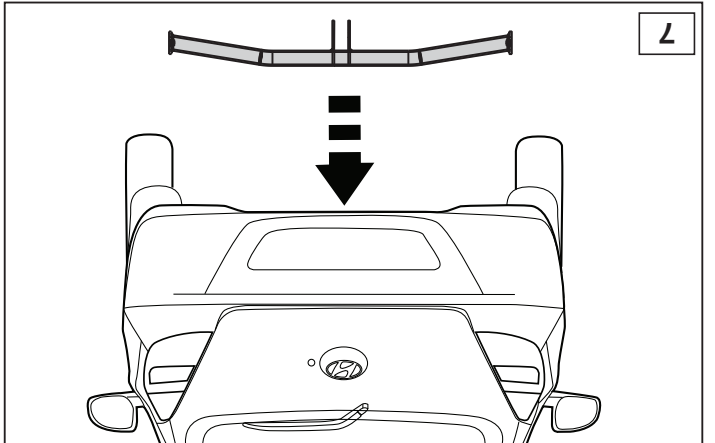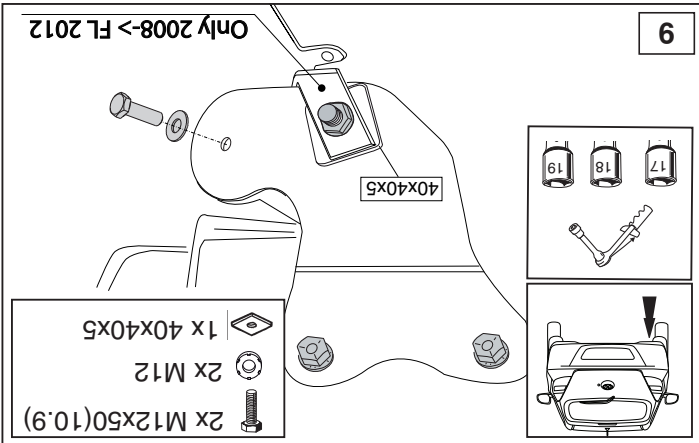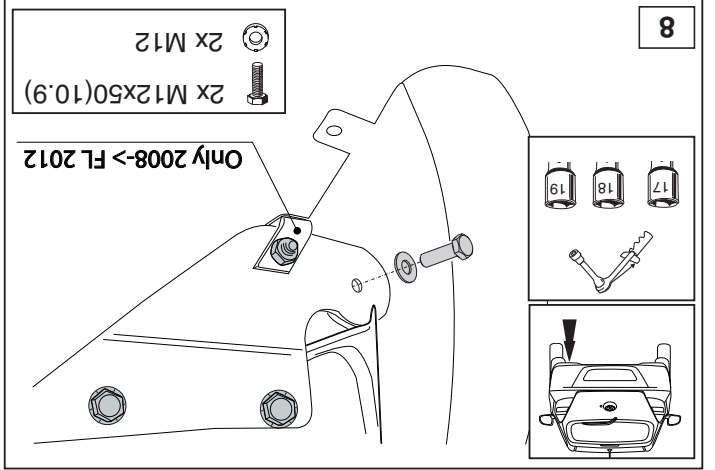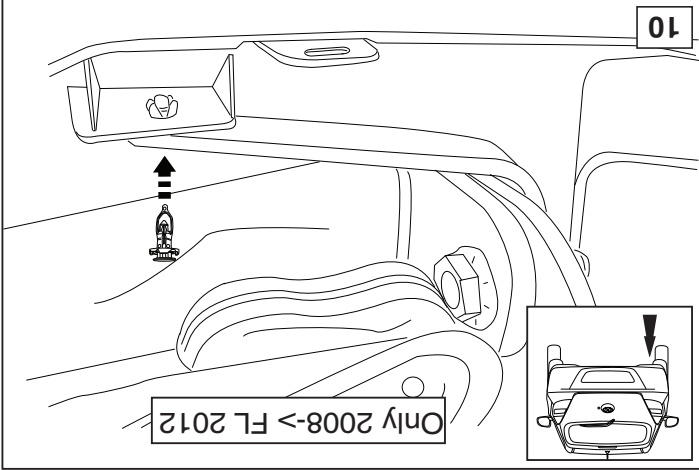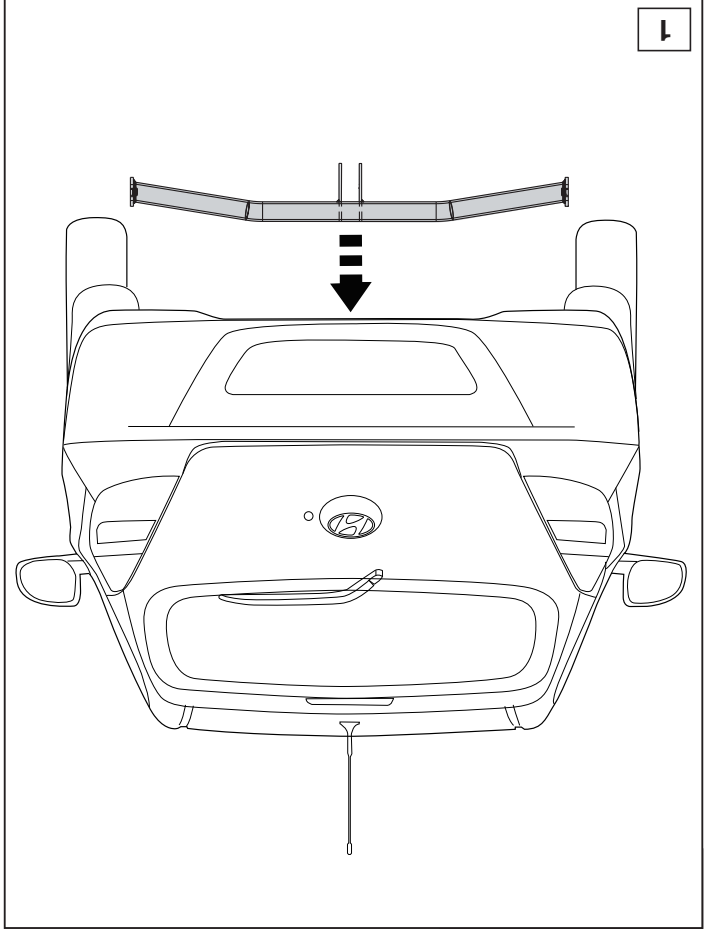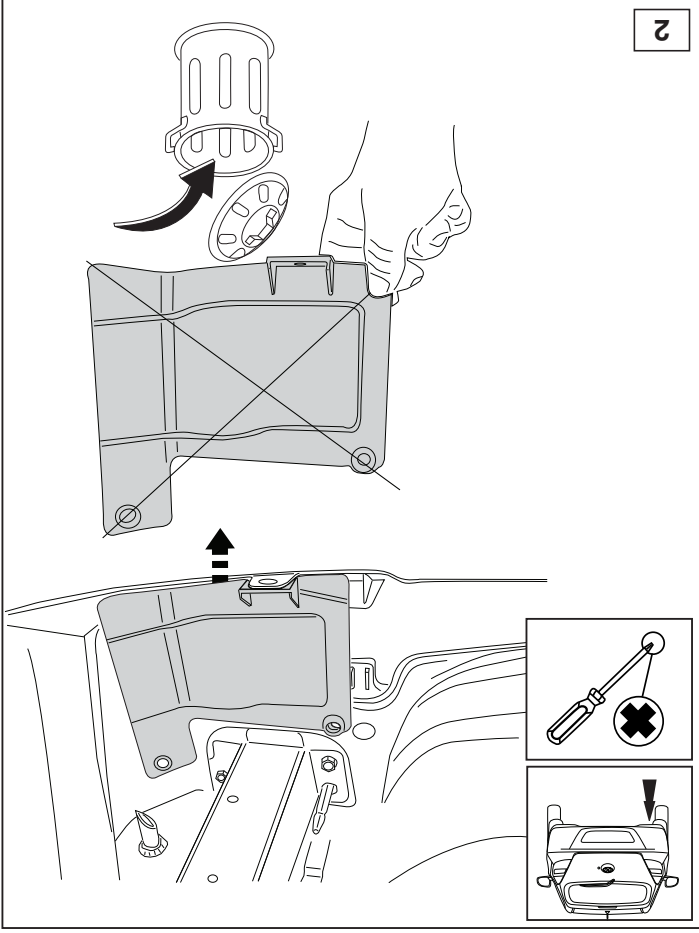

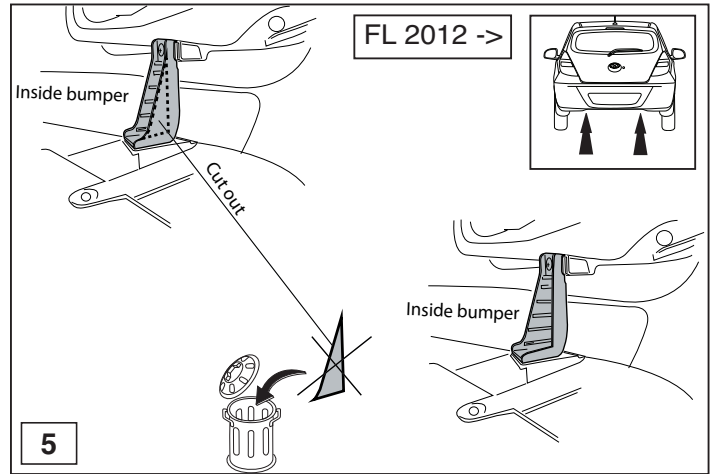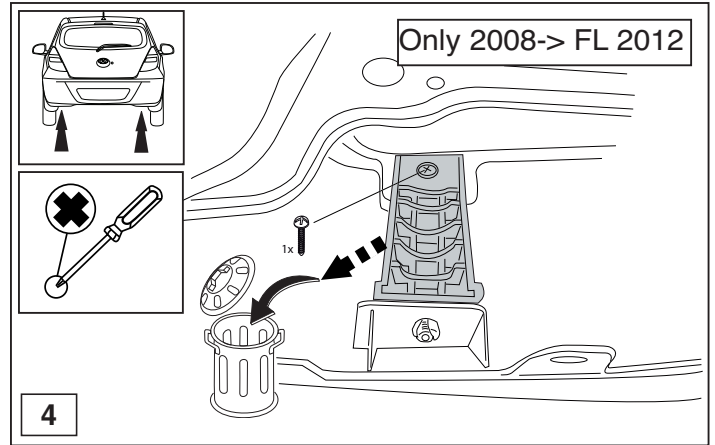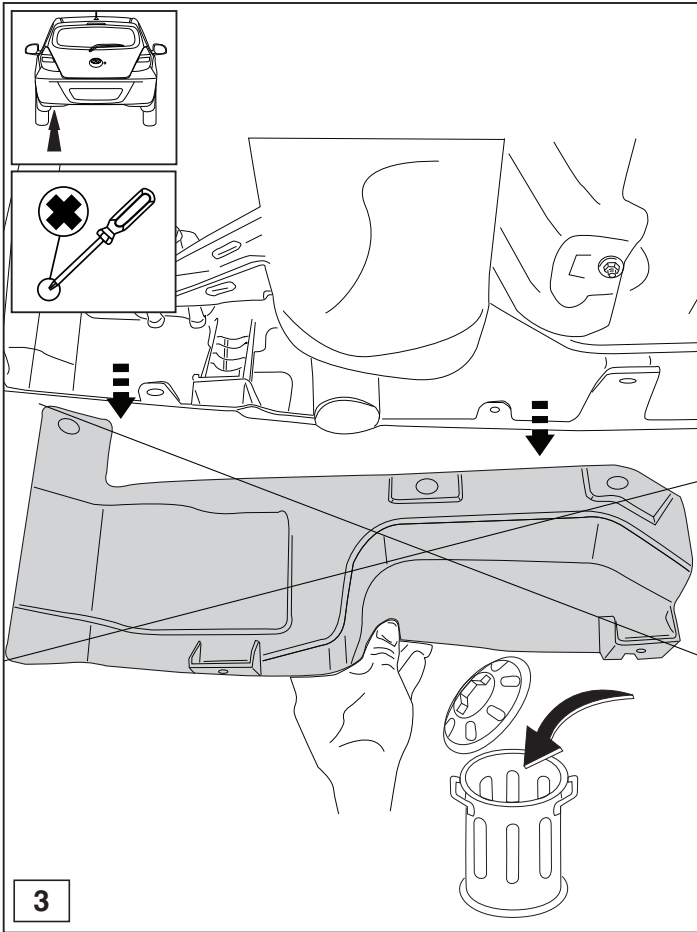

© 508270/03-04-2014/7

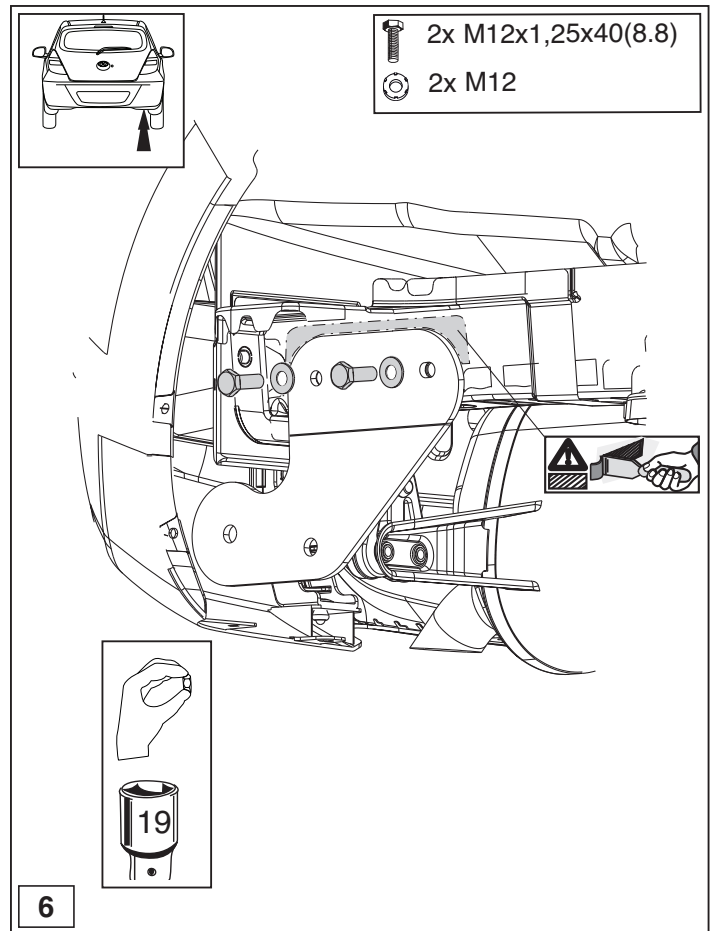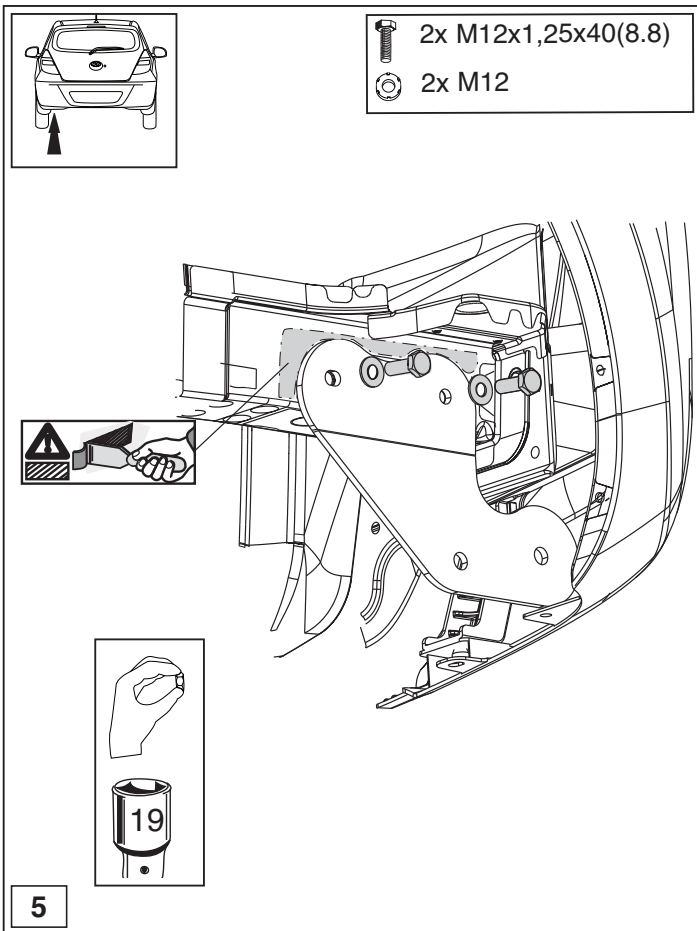

© 508270/03-04-2014/8